

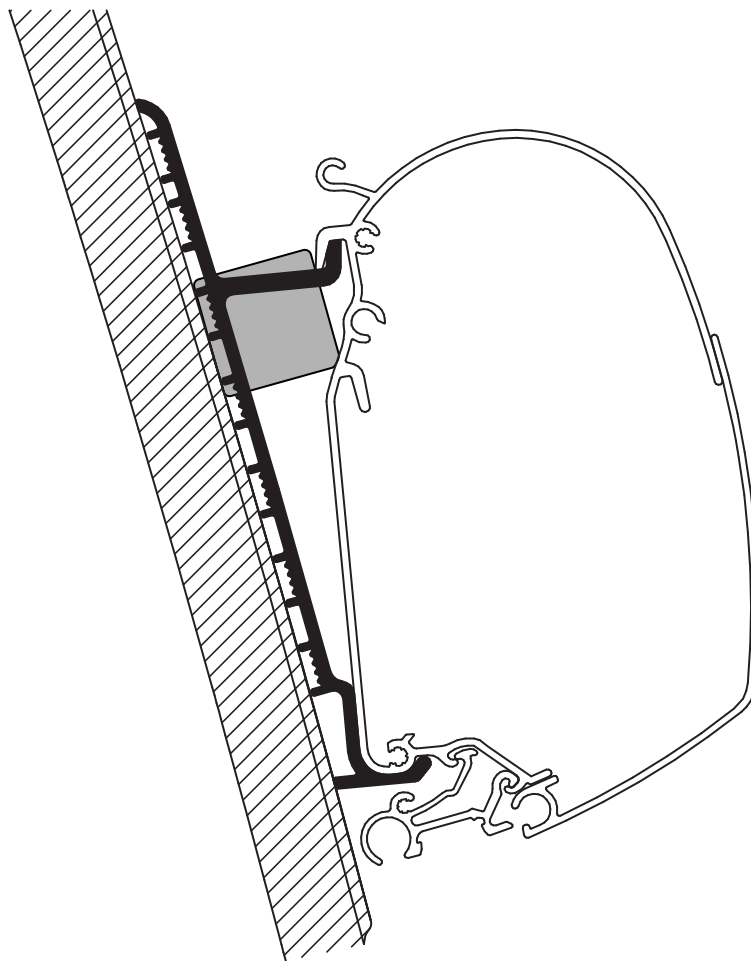
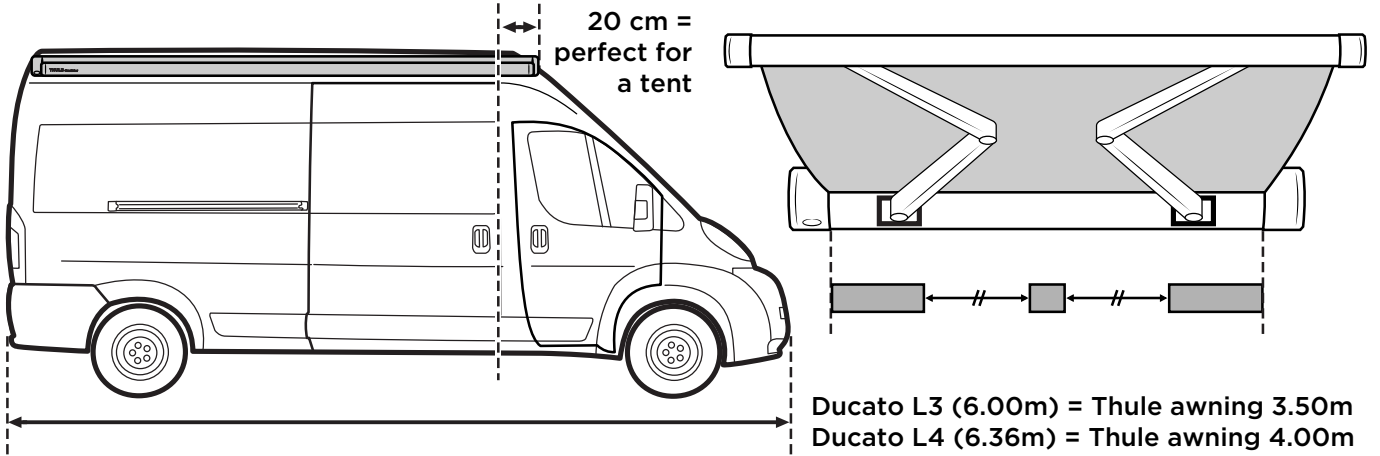


Ducato H3 Wall adapter V2

➤ Instructions

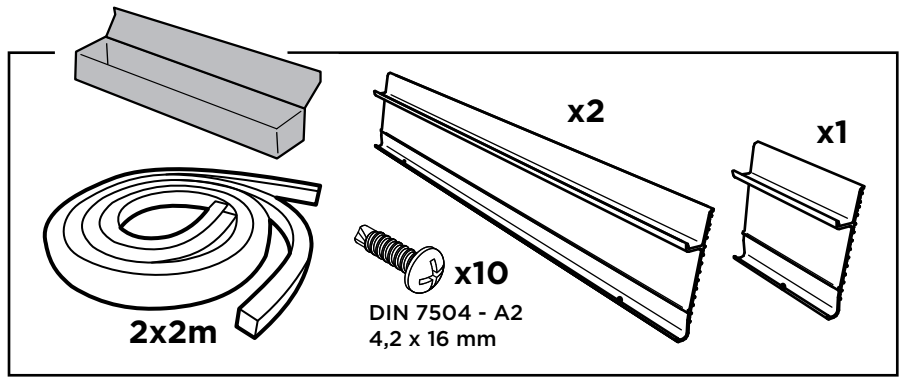

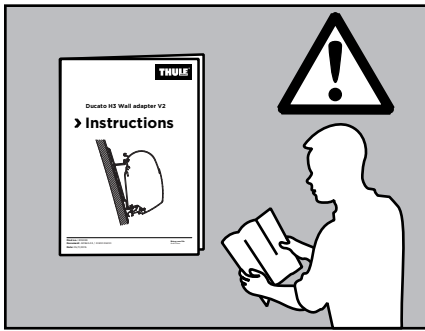

Glue / Lijmen / Verklebung:
Thule recommends / beveelt aan / empfiehlt: **SIKA 252 or Terostat MS937**

Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.
Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.
Preparation and sealing according to the prescripts of the glue supplier.

